


Programming scheme

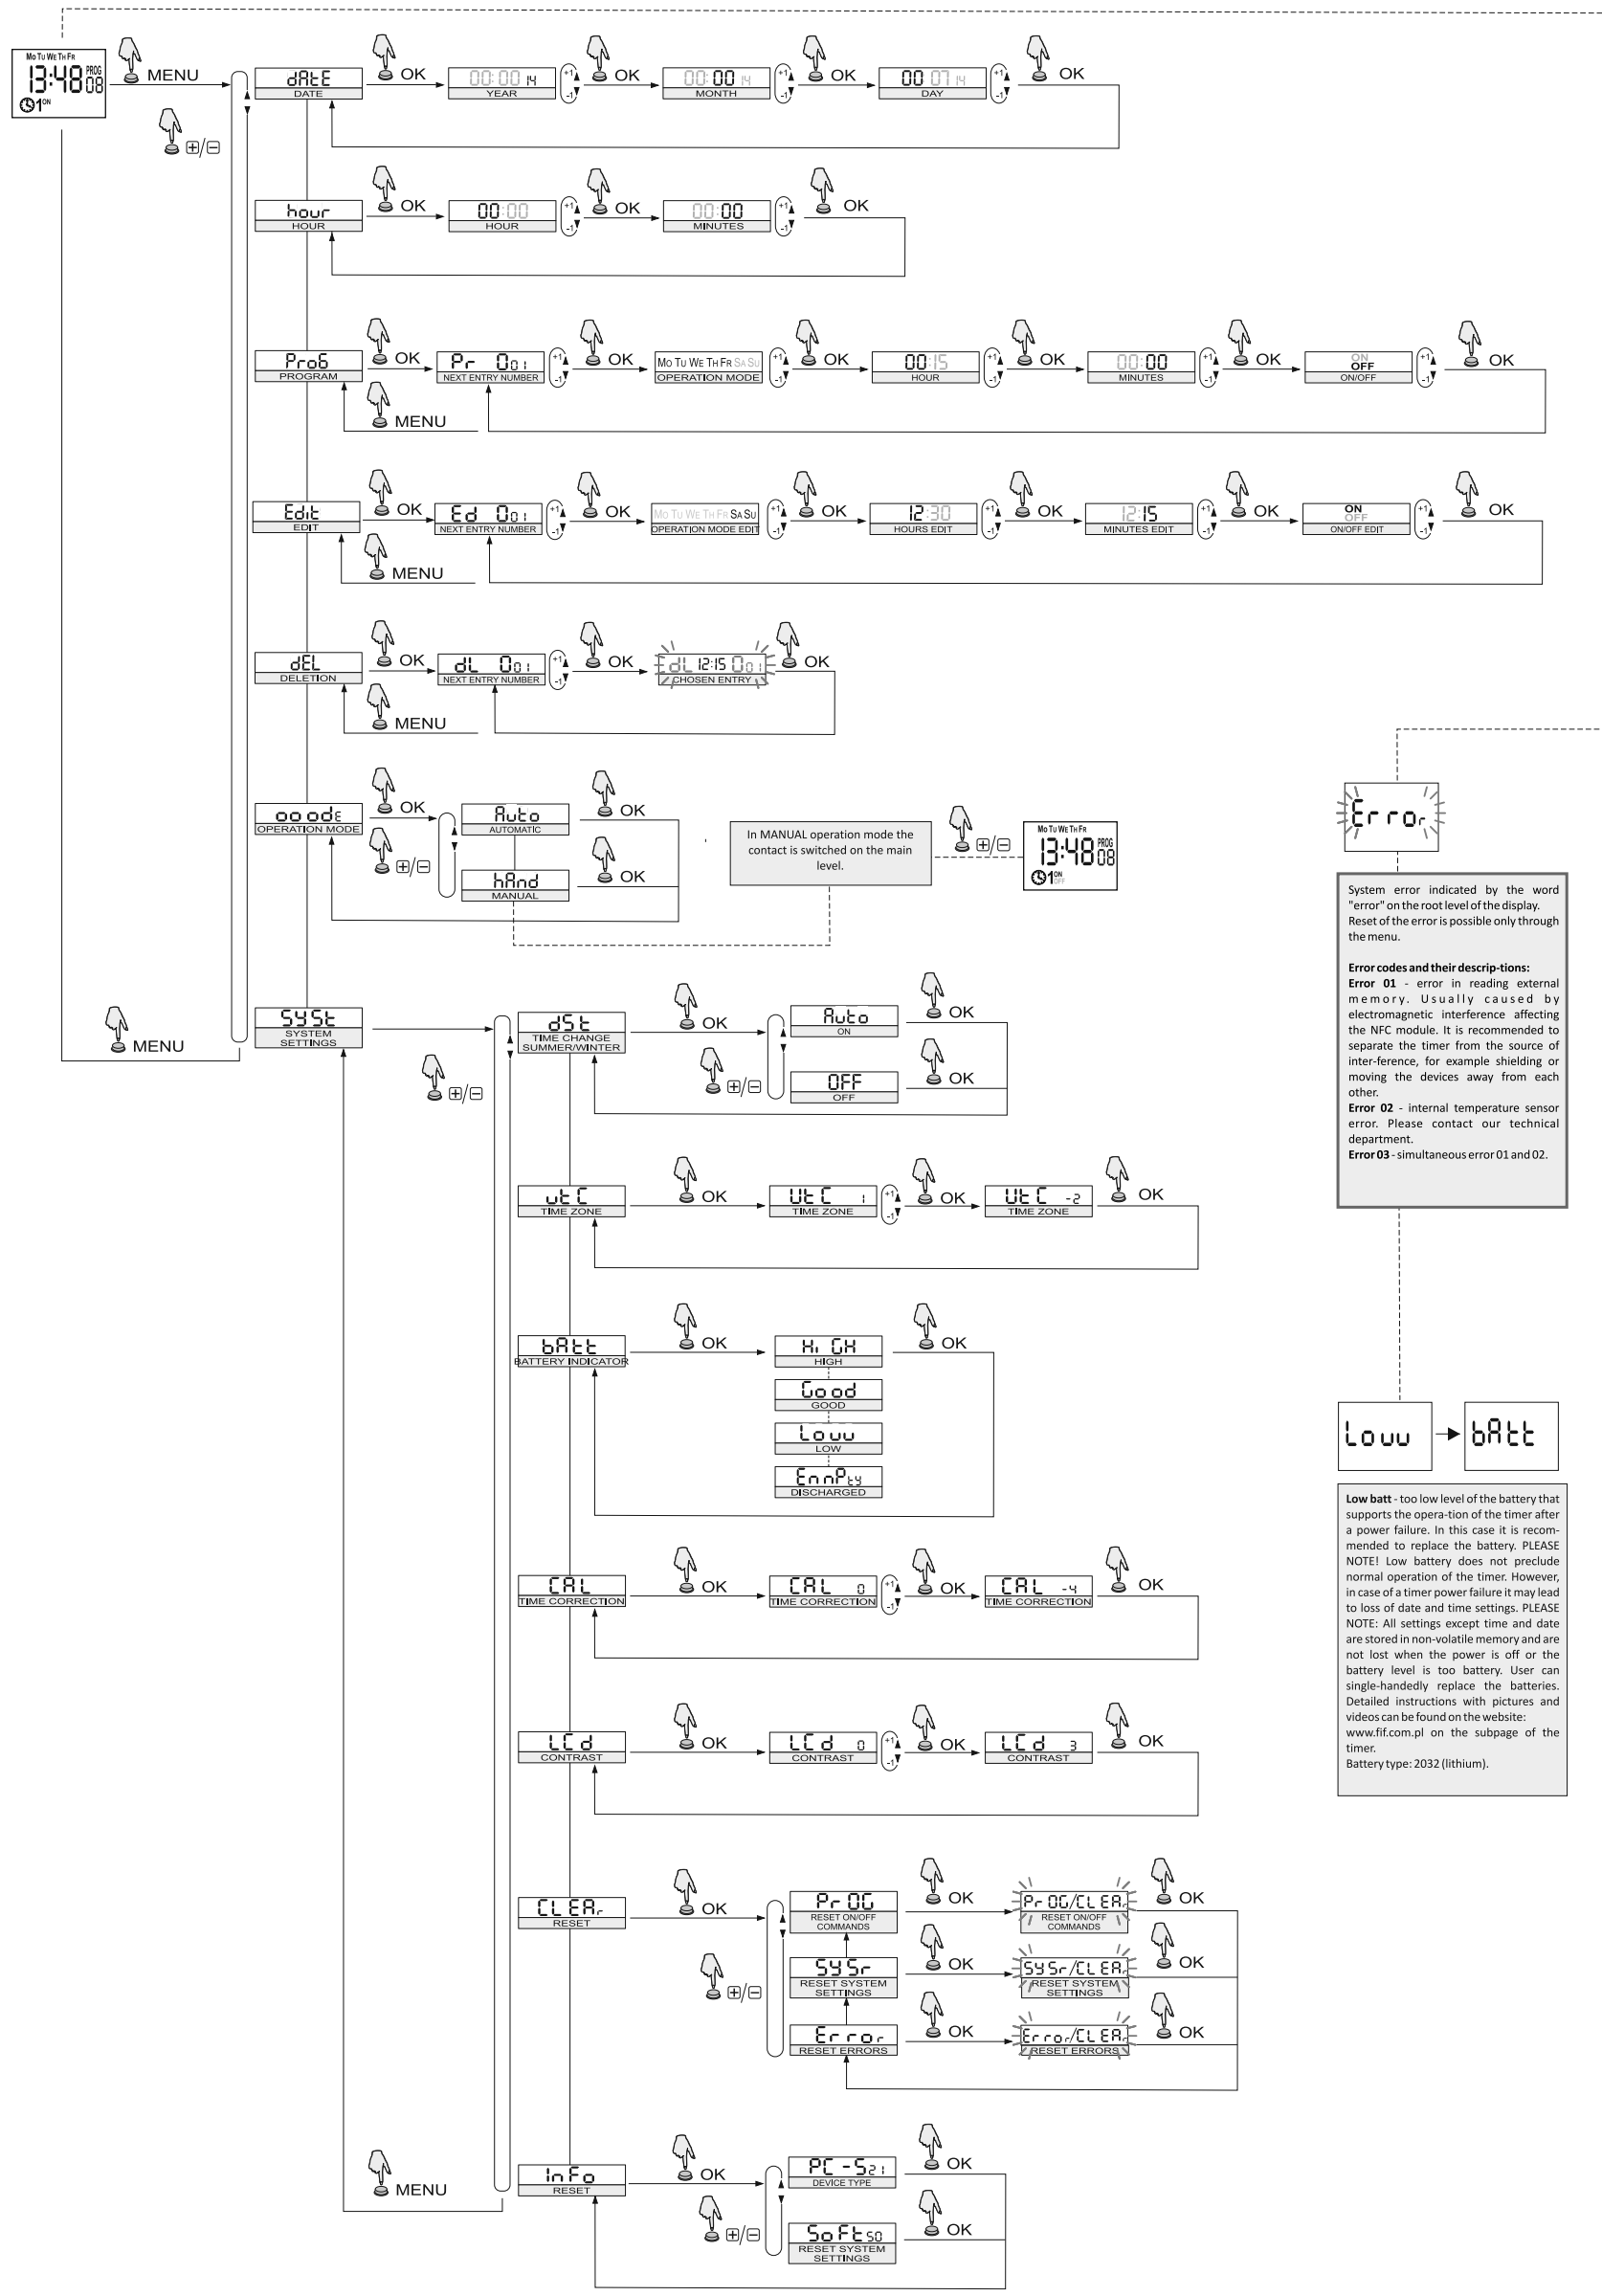

Error

System error indicated by the word "error" on the root level of the display. Reset of the error is possible only through the menu.

Error codes and their descriptions:
Error 01 - error in reading external memory. Usually caused by electromagnetic interference affecting the NFC module. It is recommended to separate the timer from the source of interference, for example shielding or moving the devices away from each other.
Error 02 - internal temperature sensor error. Please contact our technical department.
Error 03 - simultaneous error 01 and 02.

Low batt - too low level of the battery that supports the operation of the timer after a power failure. In this case it is recommended to replace the battery. PLEASE NOTE! Low battery does not preclude normal operation of the timer. However, in case of a timer power failure it may lead to loss of date and time settings. PLEASE NOTE: All settings except time and date are stored in non-volatile memory and are not lost when the power is off or the battery level is too battery. User can single-handedly replace the batteries. Detailed instructions with pictures and videos can be found on the website: www.fif.com.pl on the subpage of the timer. Battery type: 2032 (lithium).